

LX200 Quick Reference Card	
Key	Definition
ENTER	Press to select an item or Press and hold to set or change value
MODE	Cycles through MODES or Exits menus
GOTO	Slew to object displayed or Enter Go TO Coordinate routine
N,E,S,W,	Direction Keys or E & W move cursor while editing values
SLEW	= 8°/sec slew speed & fast focus
FIND	2°/sec slew speed & fast focus
CNTR	32 X speed & fine focus
GUIDE	2 X speed & fine focus
RET	Sets Reticle brightness: Hold and press "PREV" & "NEXT" to adjust
FOCUS	Sets Focus: Hold and press "PREV" & "NEXT" to adjust
MAP	Toggles MAP light
M	Messier Objects: Press, then enter object number, follow with "ENTER"
STAR	Stars & Planets: Press, then enter object number, follow with "ENTER"
CNGC	CNGC Objects: Press, then enter object number, follow with "ENTER"
PREV & NEXT	Moves item selector (arrow) on display or Goes to next/prev object in FIND or Changes Focus or Reticle Brightness or Changes sign (+ or -) in edits and sets or Changes letters in SITE name or Selects Object Types in FIND TYPE
Special Functions	
ENTER	Center object then hit and hold "ENTER"
Backlight Adjust	Go to MODE 5 (all displays off), press "ENTER", use "PREV" & "NEXT" to adjust, press enter when done